

347357-701, 347358-701

Residential Small Package Product

Ultra Low NOx 60k and 90k Models Burner Box Baffle Kit

Installation Instructions

NOTE: Read the entire instruction manual before starting the installation.

Table of Contents

Safety Considerations	1
60k Instructions to Remove and Replace Burner Box Baffle.	2
90k Instructions to Remove and Replace Burner Box Baffle.	5

Safety Considerations

Improper installation, adjustment, alteration, service maintenance, or use can cause explosion, fire, electrical shock, or other conditions which may cause death, personal injury, or property damage. Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or agency must use factory-authorized kits or accessories when modifying this product. Refer to the individual instructions packaged with the kits or accessories when installing.

Follow all safety codes. Wear safety glasses, protective clothing, and work gloves. Have a fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions included in literature and attached to the unit. consult local building codes, the current editions of the National Fuel Gas Code (NFGC) NFPA 54/ANSI Z223.1, and the National Electrical Code (NEC) NFPA 70.

In Canada refer to the current editions of the National Standards of Canada CAN/CSA-B149.1 and 2 Natural Gas and Propane Installation codes, and Canadian Electrical Code CSA C22.1

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury. Understand these signal words: DANGER, WARNING, and CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which

will result in severe personal injury or death. WARNING signifies hazards which could result in personal injury or death. CAUTION is used to identify unsafe practices which may result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which will result in enhanced installation, reliability, or operation.

WARNING

CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury and/or death.

Carbon Monoxide (CO) is a colorless, odorless, and tasteless poisonous gas that can be fatal when inhaled. Follow all installation, maintenance, and service instructions.

Most states in the USA and jurisdictions in Canada have laws that require the use of Carbon Monoxide (CO) alarms with fuel burning products. Examples of fuel burning products are furnaces, boilers, space heaters, generators, water heaters, stoves/ranges, clothes dryers, fireplaces, incinerators, automobiles, and other internal combustion engines. Even if there are no laws in your jurisdiction requiring a CO Alarm, it's highly recommended that whenever any fuel burning product is used in or around the home or business that the dwelling be equipped with a CO Alarm(s). The Consumer Product Safety Commission recommends the use of CO Alarm(s). The CO Alarm(s) must be installed, operated, and maintained according to the CO Alarm manufacturer's instructions. For more information about Carbon Monoxide, local laws, or to purchase a CO Alarm only, please visit the following website <https://www.kidde.com>



1/4-in. Size Ratcheting Wrench



1/4-in. Size Nut Driver Bit



Phillips Head Screwdriver



1/4-in. Size Stubby Driver
(Optional)

Additional Tools for 90k kit only



12" Hex Drill Bit Extension



Cordless Drill

NOTE: Do not overtighten screws.

Fig. 1 – Recommended Tools

! WARNING

ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death. Before installing or servicing system, always turn off main power to system and install lockout tag. There may be more than one disconnect switch. Turn off accessory heater power switch if applicable.

! WARNING

FIRE, EXPLOSION, ELECTRICAL SHOCK AND CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury or unit damage.

A qualified installer or agency must use only factory-authorized kits or accessories when modifying this product.

Table 1 – Kit Contents

Part Number	Description	Quantity
Kit Number 347357-701		
347357-701	Baffle Assembly 60k ULN	1
IIK-347357-358-01	Installation Instructions	1
Kit Number 347358-701		
347357-702	Baffle Assembly 90k ULN	1
IIK-347357-358-01	Installation Instructions	1
HH18HA612	Burner Thermal Switch	1
347402-201	Burner Box Label	1

60k Instructions to Remove and Replace Burner Box Baffle

1. Turn off all power to unit and lock out tag out.
2. Close manual shut off valve for the gas line. Disconnect and cap off gas line from unit.
3. Remove the bracket holding the gas valve off the burner box by removing the 4 screws. See Fig. 2.

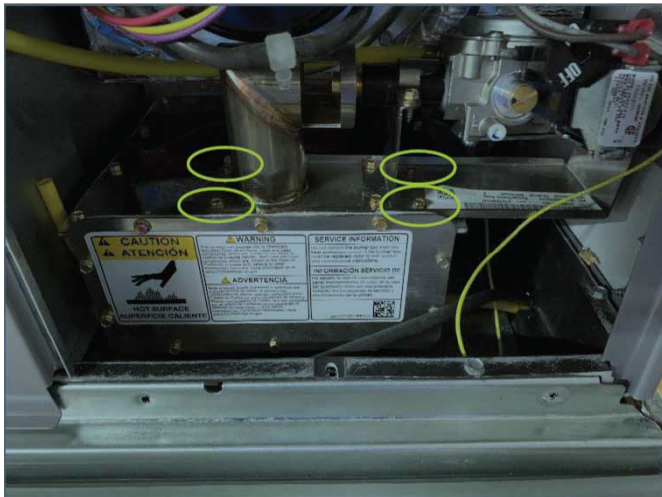


Fig. 2 – Removing Bracket Screws

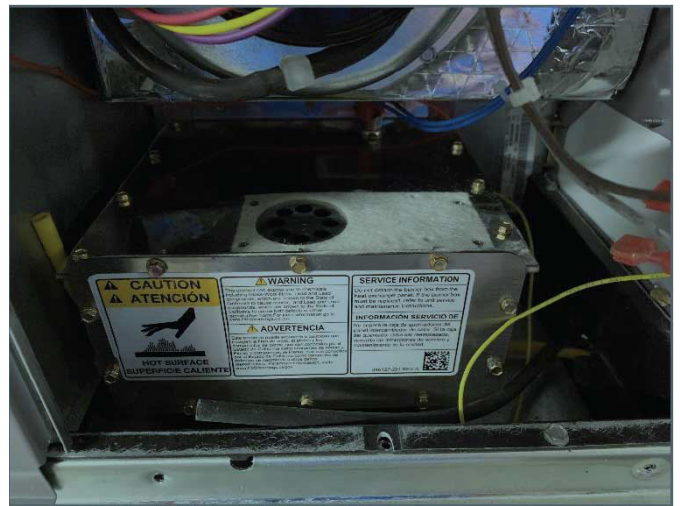


Fig. 3 – Bracket Removed

4. Remove the Burner Box Cover by removing 10 screws holding the cover. See Fig. 4.

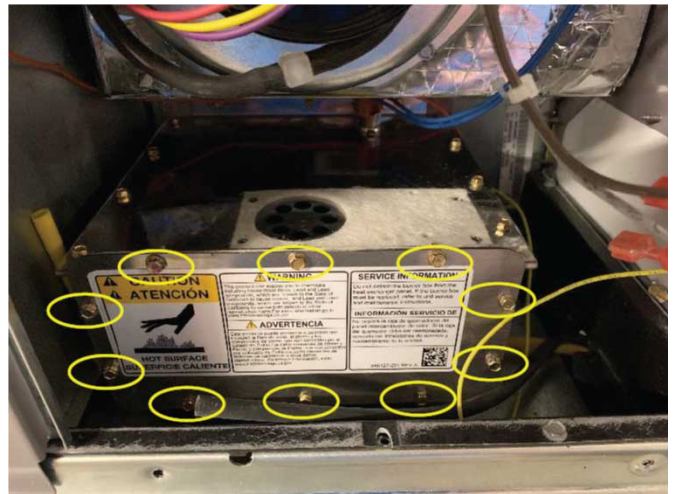


Fig. 4 – Removing Burner Box Cover Screws



Fig. 5 – Burner Box Cover Removed

5. Remove the 6 screws highlighted in Fig. 6 from the top cover of the Burner Box.

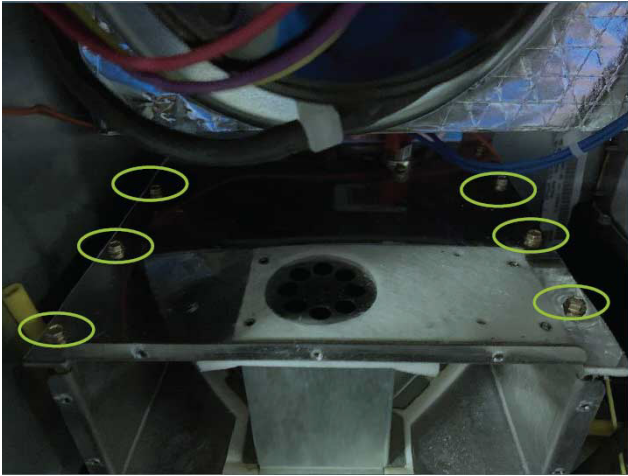


Fig. 6 – Removing Screws from Top Cover of Burner Box



Fig. 7 – Top Cover Burner Box Screws Removed

6. Baffle can now be removed from Burner Box as shown in [Fig. 8](#) and [Fig. 9](#). You may need to use free hand to gently lift top cover to allow space to slide out baffle.

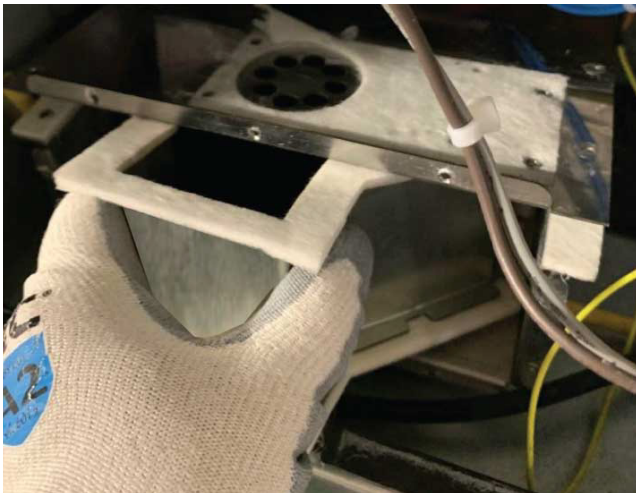


Fig. 8 – Removing Baffle from Burner Box



Fig. 9 – Baffle Removed from Burner Box

7. Install new baffle into Burner Box shown in [Fig. 10](#). New baffle should fit snugly to the sides of the Burner Box.



Fig. 10 – Installing New Baffle

8. Re-install the 6 screws back on the top cover of the Burner Box as shown in [Fig. 11](#).



Fig. 11 – Installing Screws on the Top Cover

9. Re-install the Burner Box Front Cover using the 10 screws shown in [Fig. 12](#).

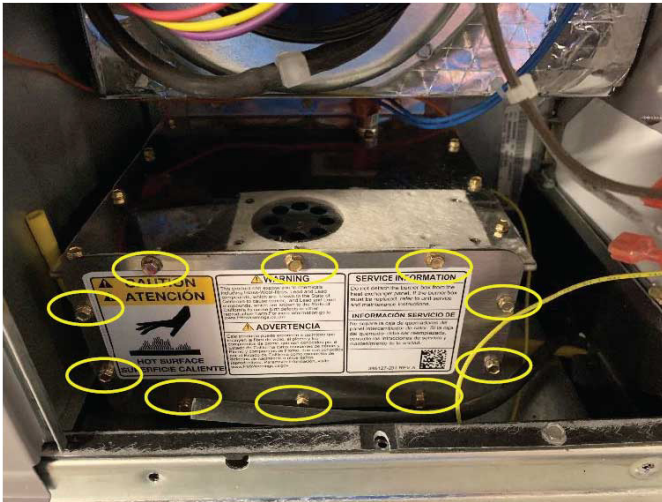


Fig. 12 – Installing Burner Box Cover Screws

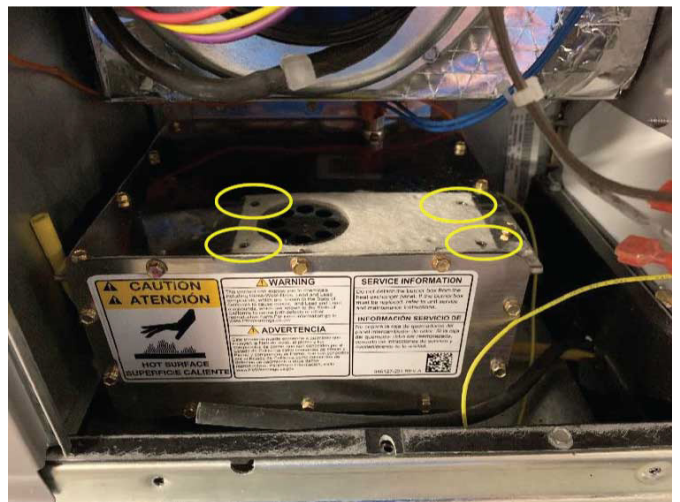


Fig. 14 – Installing the Bracket

! WARNING

CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury and/or death.

Carbon Monoxide (CO) is a colorless, odorless, and tasteless poisonous gas that can be fatal when inhaled. Follow all installation, maintenance, and service instructions.

10. Inspect the inlet hole pattern on the top cover of the Burner Box. The white gaskets on the new baffle should be clear of the inlet holes. A screwdriver can be used to adjust baffle away from the hole pattern.



Fig. 13 – Inspecting the Hole Pattern

11. Install the bracket holding the gas valve back onto the Burner Box with 4 screws. See [Fig. 14](#).

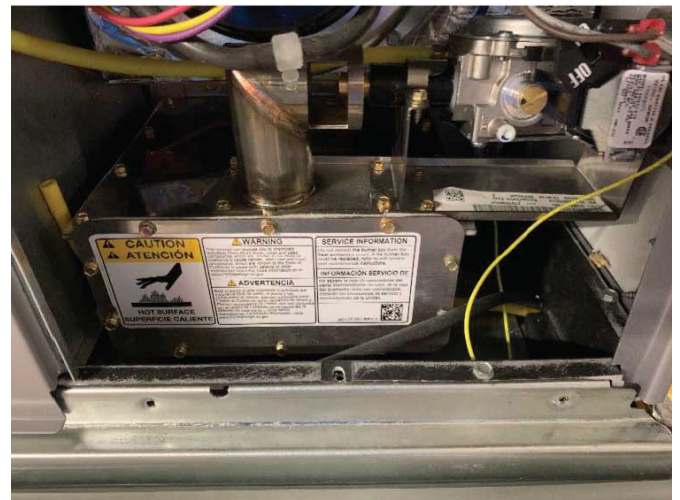


Fig. 15 – Bracket Installed

12. The unit is now ready to be reconnected to gas and power.

NOTE: If the gas heat is tested after the new burner box baffle is installed and a low “rumble” sound is detected, increasing the manifold pressure of the gas valve up to 3.8 in. w.c. is permissible to help minimize the sound.

90k Instructions to Remove and Replace Burner Box Baffle

1. Turn off all power to unit and lock out tag out.
2. Close manual shut off valve for the gas line. Disconnect and cap off gas line from unit.
3. Remove the bracket holding the gas valve off the Burner Box by removing the 4 screws. See Fig. 2 and Fig. 3.
4. Remove the Burner Box Cover by removing the 10 screws holding the cover. See Fig. 4 and Fig. 5.
5. Remove 12 screws highlighted in Fig. 16 and remove the top cover of 90k Burner Box shown in Fig. 17. Apply Burner Thermal Switch Label on top cover shown in Fig. 17.

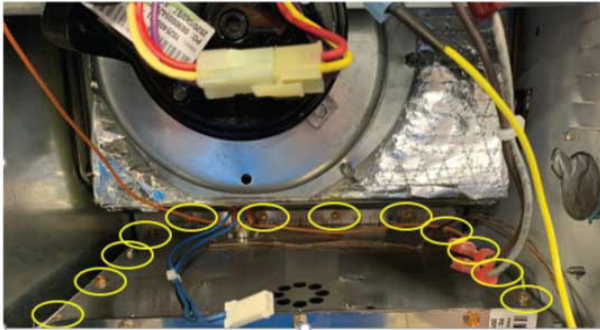


Fig. 16 – Removing Top Cover Screws

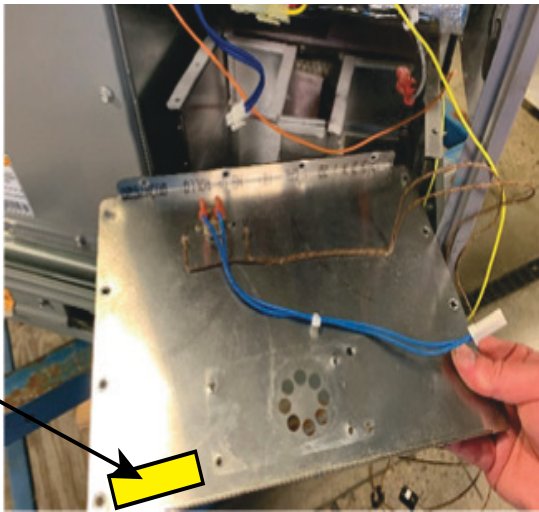


Fig. 17 – Top Cover Removed

6. Unplug wires from Burner Thermal Switch and remove 2 phillips head screws shown in Fig. 18. Install Burner Thermal Switch provided in kit on top cover and reconnect wires.

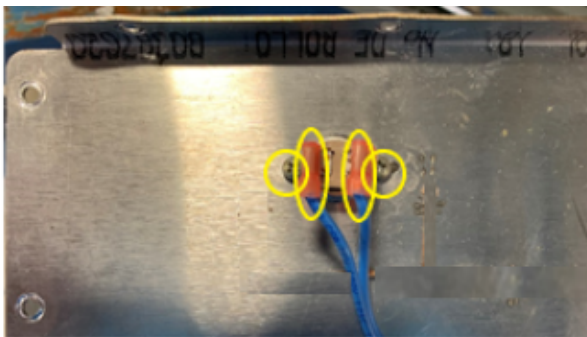


Fig. 18 – Wire Connections and Screws to Burner Thermal Switch

! WARNING

PROPERTY DAMAGE HAZARD

Failure to install new Burner Thermal Switch can result in property damage.

The burner box baffle kit contains a new Burner Thermal Switch that must be installed when the baffle kit is installed. If the Burner Thermal Switch needs replacement in the future, use the same part as supplied with this kit. Refer to label provided with baffle kit and installed on burner box for new switch part number.

7. Baffle can now be removed from Burner Box as shown in Fig. 8 and Fig. 9. You may need to use free hand to gently lift top cover to allow space to slide out baffle.
8. Install new baffle into Burner Box shown in Fig. 10. New baffle should fit snugly to the sides of the Burner Box.
9. Re-install the 12 screws back on the top cover of the Burner Box as shown in Fig. 19.

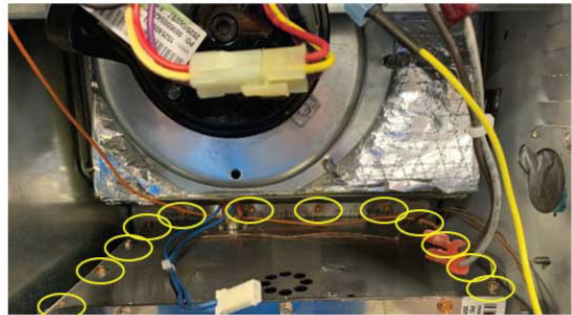


Fig. 19 – Screws Re-installed on 90k Top Cover

10. Re-install the Burner Box Front Cover using the 10 screws shown in Fig. 12.

! WARNING

CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury and/or death.

Carbon Monoxide (CO) is a colorless, odorless, and tasteless poisonous gas that can be fatal when inhaled. Follow all installation, maintenance, and service instructions.

11. Inspect the inlet hole pattern on the top cover of the Burner Box. The white gaskets on the new baffle should be clear of the inlet holes. A screwdriver can be used to adjust baffle away from the hole pattern. See Fig. 13.
12. Install the bracket holding the gas valve back onto the Burner Box with 4 screws. See Fig. 14 and Fig. 15.
13. The unit is now ready to be reconnected to gas and power.

NOTE: If the gas heat is tested after the new burner box baffle is installed and a low “rumble” sound is detected, increasing the manifold pressure of the gas valve up to 3.8 in. w.c. is permissible to help minimize the sound.

